

QUICK REFERENCE BOOKLET ROADSTER ELECTRONIC COMMAND CENTER (RECC) AND THE INFOTAINMENT CENTER

can-am



Important Information:

Practice and become proficient with the infotainment center functions before riding. This booklet is provided as a reminder on the main functions of the infotainment center. Refer to the Operator's Guide for complete instructions.

Some features shown in this document may differ from your vehicle.

NOTE: Using the infotainment center for a prolonged time without the engine running will discharge the battery.



® and the BRP logo are trademarks of Bombardier Recreational Products Inc. or its affiliates.
© 2011 Bombardier Recreational Products Inc. and BRP US Inc. All rights reserved.

 


iPhone, iPod, iPod touch and iPod nano are trademarks of Apple Inc., registered in U.S.A. and other countries. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or to comply with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

704 932 952

NAVIGATION

- When there is an arrow (←, →, ↑, ↓) on the screen, use the corresponding button on the RECC:
- When there is a double arrow (↔, ↔, ↕, ↕) on the screen, both **quick press*** and **long press**** functions are available. Use the corresponding button on the RECC.

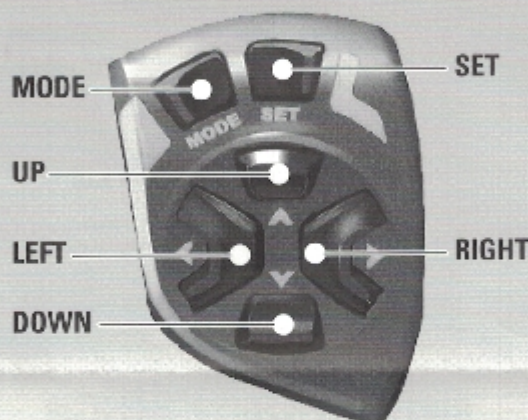

MODE : Navigate through category icons or exit a screen

SET : *Quick Press = In main screen: Select Trip A or B

In audio screen: Select the audio device

**Long Press = Enter the tune screen

UP : Increase volume or a value

DOWN : Decrease volume or a value

A long press of the DOWN button mutes the volume. Press the UP button to resume

LEFT : Decrease value referenced by the left arrow on the screen, select a secondary menu or a setting or move to the left column

Long Press = SEEK the next lower available radio station or the previous playlist on an iPod device or SLEW to the previous channels in XM

RIGHT : Increase value referenced by the right arrow on the screen, select a secondary menu or a setting or move to the right column

Long Press = SEEK the next higher available radio station or the next playlist on an iPod device or SLEW to the next channels in XM

*Quick Press: Press and release the button

**Long Press: Press button, hold for more than 1 second then release

AUDIO SCREENS

Selecting an audio screen:

From the AUDIO screen, repeatedly press the SET button to select the next audio screen

Press MODE to exit or to navigate through the category icons



Audio screens:


- FM
- AM
- iPod device or AUX
- XM (satellite)
- WX (weather)

MAIN SCREEN

While riding, press the UP or DOWN button to increase or decrease the volume.


A **long press** of the DOWN button mutes the volume.

Press the UP button to resume.

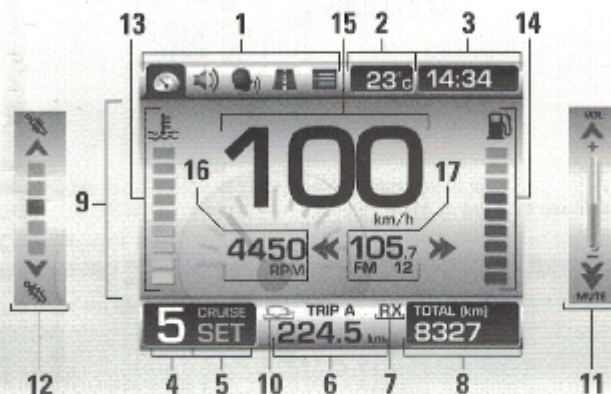

- Category icons
- Ambient temperature
- Clock
- Gearbox position
- Cruise control status (OFF, ON, SET)
- Trip meter (A, B)
- CB communication status (RX, TX, OFF)
- Odometer
- Main screen
- Trailer mode icon
- Volume indicator bar
- Suspension adjustment indicator
- Engine temperature gauge
- Fuel level gauge
- Speedometer
- Engine speed (to be enabled in preferences)
- Radio frequency or channel and audio type (FM, AM, XM, WX, iPod device, AUX) and preset number (to be enabled in preferences)

Category icons:

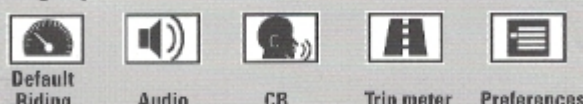

Selecting a category icon:

Repeatedly press the MODE button to select the next category icon to display its related screen

AUDIO SCREENS STORING AN iPod DEVICE SELECTION WHILE VEHICLE IS STOPPED

From the iPod device screen, a long press of the SET button enters the selection screen

Press the UP or DOWN button to select Playlist, Artist or Albums

Press the RIGHT button to move to the right column




Press the UP or DOWN button to make a selection.

AUDIO SCREENS

Selecting an audio screen:

From the AUDIO screen, repeatedly press the SET button to select the next audio screen

Press MODE to exit or to navigate through the category icons

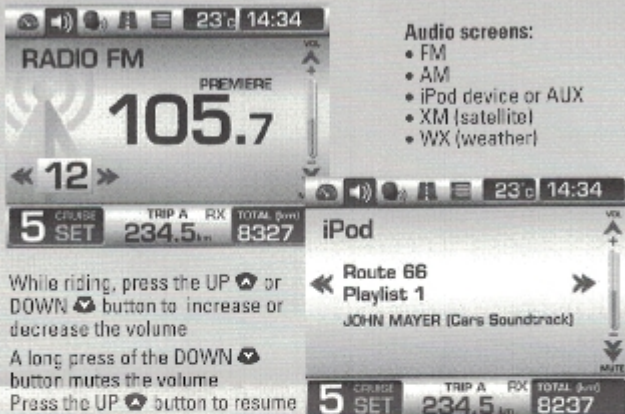

Audio screens:

- FM
- AM
- iPod device or AUX
- XM (satellite)
- WX (weather)

While riding, press the UP button or DOWN button to increase or decrease the volume

A long press of the DOWN button mutes the volume

Press the UP button to resume

Using an audio preset

Press the LEFT or RIGHT button to:

Decrease/increase the preset number (FM, AM, XM, WX)

Select the previous/next song (iPod device)

Long press:

FM, AM: SEEK the next lower/higher available radio station

iPod device: Select the previous/next Playlist, Album or Artist as per the last selection in iPod device screen

XM: SLEW to the previous/next Channels



AUDIO SCREENS STORING AN iPod DEVICE SELECTION WHILE VEHICLE IS STOPPED

From the iPod device screen, a long press of the SET button enters the selection screen

Press the UP or DOWN button to select Playlist, Artist or Albums

Press the RIGHT button to move to the right column



Press the UP or DOWN button to make a selection.



Use the RIGHT then UP/DOWN buttons to make your final selection

Press the RIGHT button to save the selection

Short press: Press the LEFT or RIGHT button to select the previous/next song

Long press: Select the previous/next Playlist, Album or Artist as per the last selection in iPod device screen



Press MODE to exit or to navigate through the category icons



AUDIO SCREENS STORING A RADIO PRESET WHILE VEHICLE IS STOPPED

From the FM, AM screen, a long press of the SET button enters the tune screen

Press the LEFT or RIGHT button to choose the radio frequency. Use a long press to SEEK the next lower or higher available radio station
 Press the UP button to select the desired preset number then use a long press to the DOWN button to store the selections
 Press MODE to exit or to navigate through the category icons



AUDIO SCREENS STORING A RADIO PRESET OR CHANGING A SONG IN THE iPod DEVICE WHILE RIDING

From the FM, AM, XM screen: A long press of the SET button enters the tune screen

Storing a radio preset:

Press the LEFT or RIGHT button to select the radio frequency (FM, AM) or to change the CHANNEL (XM). Use a long press to SEEK the next lower or higher available radio station (FM, AM) or to SLEW to the previous or next CHANNELS (XM)
 Use a long press of the DOWN button to store the selection to any available preset number



From the iPod device screen: Press the LEFT or RIGHT button to select the previous or next song. Use a long press to select the previous/next Playlist, Album or Artist as per the last selection in iPod device screen



From the XM screen, a long press of the SET button enters the selection screen
 Press the UP or DOWN button to make a choice in the CATEGORIES column

Press the RIGHT button to move to the CHANNELS column
 Press the UP or DOWN button to make a selection

Press the RIGHT button to save the selection

Press the LEFT or RIGHT button to choose the CHANNEL
 Use a long press to SLEW to the previous/next CHANNELS

Press the UP button to select the desired preset number then use a long press to the DOWN button to store the selections

Press MODE to exit or to navigate through the category icons



CB (Citizen Band)

Press the LEFT or RIGHT button to move to the desired column

 
Press the UP to increase the channel, a setting or the volume

Press the DOWN button to decrease the channel, a setting or the volume

A long press when there is a double arrow in the screen turns OFF a function, sets the lowest value or mutes the volume




N.B.: To turn OFF the CB. Select the squelch adjustment column and use a long press of the DOWN button

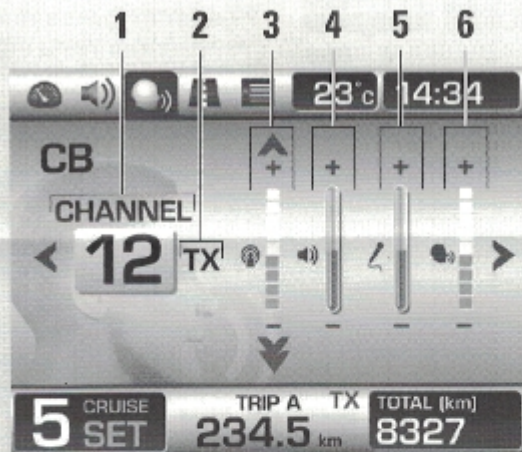
Press MODE to exit or to navigate through the category icons. The chosen options will be kept.





1. Current channel
2. CB communication status: Receiving (RX), Transmitting (TX), OFF
3. Squelch adjustment
4. CB volume adjustment
5. Intercom volume adjustment (i-com)
6. Voice activation sensitivity adjustment (vox)



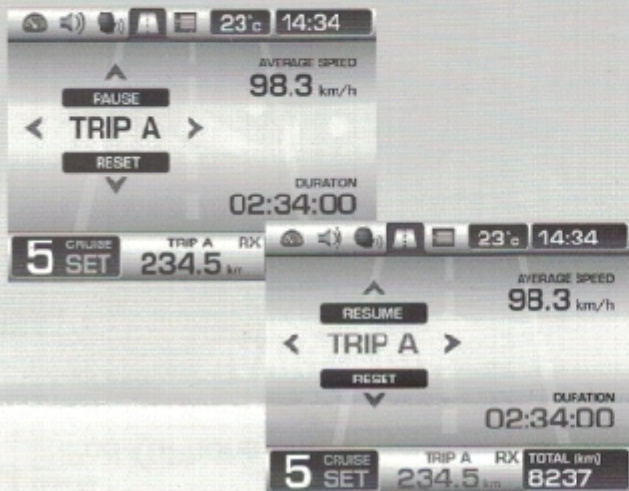


TRIP METER


Press the LEFT  or RIGHT  button to select Trip A or Trip B
Press the UP  button to temporarily PAUSE the selected trip meter and trip time calculation.



Press the UP  button to RESUME
Press the DOWN  button to reset all values of the selected trip meter.

PREFERENCES

Press the UP  or DOWN  button to move within the selected column
Press the LEFT  or RIGHT  button to move to the next left or right column
Continue using this sequence to move to the desired option
Select another option if desired or press MCDE  to exit or to navigate through the category icons. The chosen options will be kept.

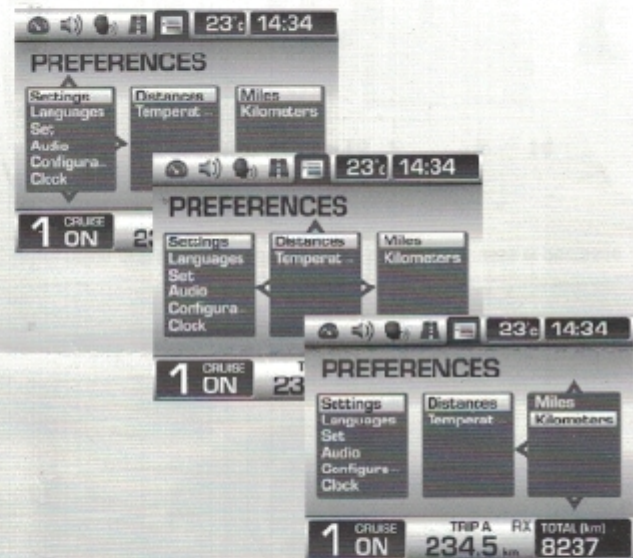

THE WORLD IS OUR PLAYGROUND.

From snow and water to on- and off-road fun, BRP's passion for adventure fuels the innovations that deliver the ultimate experience in powersports. Because your free time should always be your best time.

SKI-DOO® LYNX™ SEA-DOO® EVINRUDE® JOHNSON® ROTAX® CAN-AM™