

# QUICK REFERENCE BOOKLET ROADSTER ELECTRONIC COMMAND CENTER (RECC) AND THE INFOTAINMENT CENTER

## Important Information:

Practice and become proficient with the infotainment center functions before riding. This booklet is provided as a reminder on the main functions of the infotainment center. Refer to the Operator's Guide for complete instructions.

Some features shown in this document may differ from your vehicle.

**NOTE:** Using the infotainment center for a prolonged time without the engine running will discharge the battery.

® TM and the BRP logo are trademarks of Bombardier Recreational Products Inc. or its affiliates.  
© 2011 Bombardier Recreational Products Inc. and BRP US Inc. All rights reserved.


Made for  
 iPod iPhone

iPhone, iPod, iPod nano and iPod touch are trademarks of Apple Inc. registered in U.S.A. and other countries.  
"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.  
Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.  
Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

704 902 962

## NAVIGATION

- When there is an arrow on the screen, use the corresponding button on the RECC: .
- When there is a double arrow on the screen, both **quick press\*** and **long press\*\*** functions are available. Use the corresponding button on the RECC.

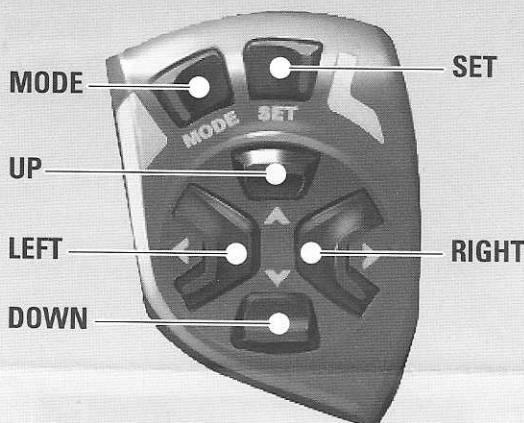

**MODE** : Navigate through category icons or exit a screen

**SET** : **\*Quick Press** = In main screen: Select Trip A or B  
In audio screen: Select the audio device

**\*\*Long Press** = Enter the tune screen

**UP** : Increase volume or a value

**DOWN** : Decrease volume or a value

A long press of the DOWN button mutes the volume. Press the UP button to resume

**LEFT** : Decrease value referenced by the left arrow on the screen, select a secondary menu or a setting or move to the left column

**Long Press** = SEEK the next lower available radio station or the previous playlist on an iPod device or SLEW to the previous channels in XM

**RIGHT** : Increase value referenced by the right arrow on the screen, select a secondary menu or a setting or move to the right column

**Long Press** = SEEK the next higher available radio station or the next playlist on an iPod device or SLEW to the next channels in XM

**\*Quick Press:** Press and release the button

**\*\*Long Press:** Press button, hold for more than 1 second then release


**can-am**



## MAIN SCREEN

While riding, press the UP or DOWN button to increase or decrease the volume.

A **long press** of the DOWN button mutes the volume. Press the UP button to resume.

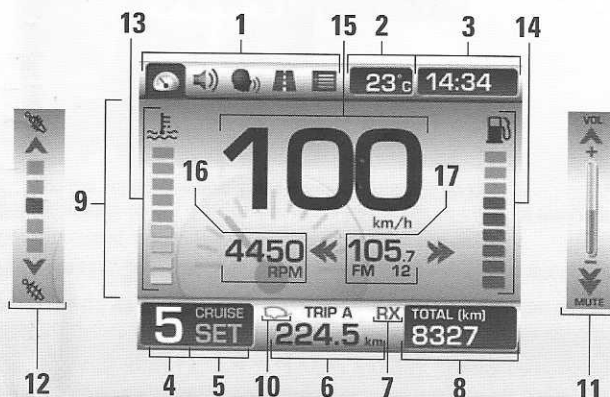

1. Category icons
2. Ambient temperature
3. Clock
4. Gearbox position
5. Cruise control status (OFF, ON, SET)
6. Trip meter (A, B)
7. CB communication status (RX, TX, OFF)
8. Odometer
9. Main screen
10. Trailer mode icon

11. Volume indicator bar
12. Suspension adjustment indicator
13. Engine temperature gauge
14. Fuel level gauge
15. Speedometer
16. Engine speed (to be enabled in preferences)
17. Radio frequency or channel and audio type (FM, AM, XM, WX, iPod device, AUX) and preset number (to be enabled in preferences)

### Category icons:



Default Riding



Audio



CB



Trip meter




Preferences


### Selecting a category icon:


Repeatedly press the MODE button to select the next category icon to display its related screen

# AUDIO SCREENS

## Selecting an audio screen:


 
From the AUDIO screen, repeatedly press the SET  button to select the next audio screen


Press MODE  to exit or to navigate through the category icons

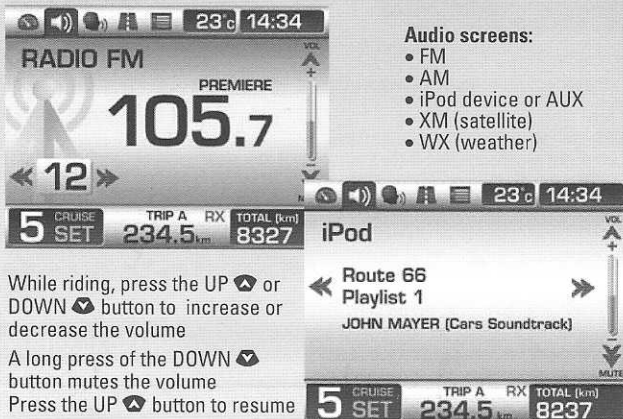

### Audio screens:


 
- FM
- AM
- iPod device or AUX
- XM (satellite)
- WX (weather)

While riding, press the UP  or DOWN  button to increase or decrease the volume

A long press of the DOWN  button mutes the volume

Press the UP  button to resume

## Using an audio preset

Press the LEFT  or RIGHT  button to:

Decrease/increase the preset number (FM, AM, XM, WX)

Select the previous/next song (iPod device)

### Long press:


FM, AM: SEEK the next lower/higher available radio station

iPod device: Select the previous/next Playlist, Album or Artist as per the last selection in iPod device screen

XM: SLEW to the previous/next Channels




 
# AUDIO SCREENS STORING AN iPod DEVICE SELECTION WHILE VEHICLE IS STOPPED

From the iPod device screen, a long press of the SET  button enters the selection screen


Press the UP  or DOWN  button to select Playlist, Artist or Albums


Press the RIGHT  button to move to the right column





Press the UP  or DOWN  button to make a selection.





Use the RIGHT  then UP/DOWN buttons to make your final selection


Press the RIGHT  button to save the selection

Short press: Press the LEFT  or RIGHT  button to select the previous/next song


Long press: Select the previous/next Playlist, Album or Artist as per the last selection in iPod device screen

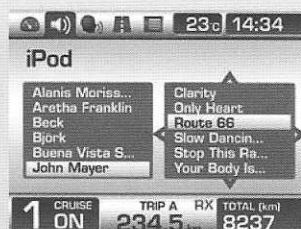




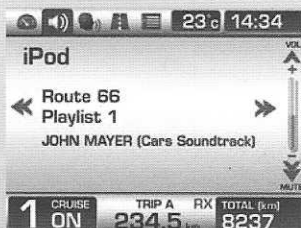

Press MODE  to exit or to navigate through the category icons




## AUDIO SCREENS STORING A RADIO PRESET WHILE VEHICLE IS STOPPED

 From the FM, AM screen, a long press of the SET  button enters the tune screen



Press the LEFT  or RIGHT  button to choose the radio frequency. Use a long press to SEEK the next lower or higher available radio station  
Press the UP  button to select the desired preset number then use a long press to the DOWN  button to store the selections  
Press MODE  to exit or to navigate through the category icons




## AUDIO SCREENS STORING A RADIO PRESET OR CHANGING A SONG IN THE iPod DEVICE WHILE RIDING



 From the FM, AM, XM screen: A long press of the SET  button enters the tune screen

### Storing a radio preset:




Press the LEFT  or RIGHT  button to select the radio frequency (FM, AM) or to change the CHANNEL (XM). Use a long press to SEEK the next lower or higher available radio station (FM, AM) or to SLEW to the previous or next CHANNELS (XM)

Use a long press of the DOWN  button to store the selection to any available preset number




From the iPod device screen: Press the LEFT  or RIGHT  button to select the previous or next song. Use a long press to select the previous/next Playlist, Album or Artist as per the last selection in iPod device screen






From the XM screen, a long press of the SET  button enters the selection screen  
Press the UP  or DOWN  button to make a choice in the CATEGORIES column

Press the RIGHT  button to move to the CHANNELS column  
Press the UP  or DOWN  button to make a selection

Press the RIGHT  button to save the selection




Press the LEFT  or RIGHT  button to choose the CHANNEL  
Use a long press to SLEW to the previous/next CHANNELS


Press the UP  button to select the desired preset number  
then use a long press to the DOWN  button to store the selections

Press MODE  to exit or to navigate through the category icons





## CB (Citizen Band)

 
Press the LEFT  or RIGHT  button to move to the desired column  
Press the UP  to increase the channel, a setting or the volume

Press the DOWN  button to decrease the channel, a setting or the volume

A long press when there is a double arrow in the screen turns OFF a function, sets the lowest value or mute the volume

N.B.: To turn OFF the CB. Select the squelch adjustment column and use a long press of the DOWN  button

Press MODE  to exit or to navigate through the category icons. The chosen options will be kept.

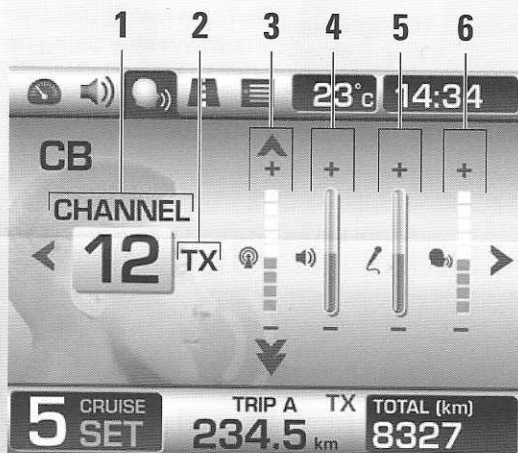


1. Current channel
2. CB communication status: Receiving (RX), Transmitting (TX), OFF
3. Squelch adjustment
4. CB volume adjustment
5. Intercom volume adjustment (i-com)
6. Voice activation sensitivity adjustment (vox)




## TRIP METER

 Press the LEFT  or RIGHT  button to select Trip A or Trip B



 Press the UP  button to temporarily PAUSE the selected trip meter and trip time calculation.





Press the UP  button to RESUME


Press the DOWN  button to reset all values of the selected trip meter.


## PREFERENCES

Press the UP  or DOWN  button to move within the selected column

Press the LEFT  or RIGHT  button to move to the next left or right column

Continue using this sequence to move to the desired option

Select another option if desired or press MODE  to exit or to navigate through the category icons. The chosen options will be kept.

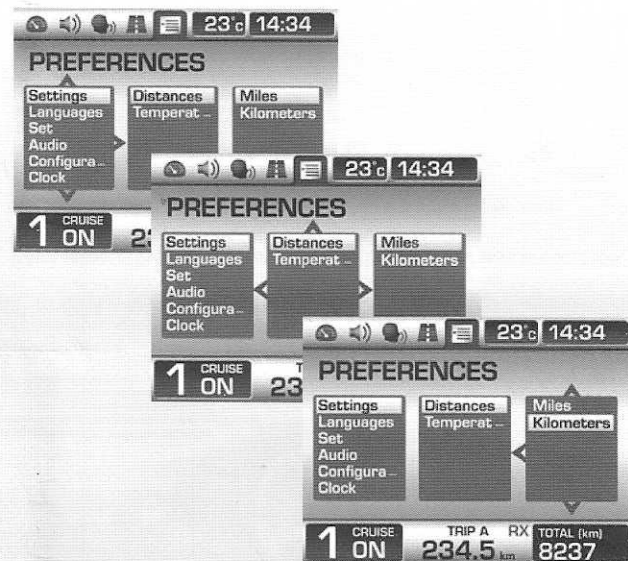

## THE WORLD IS OUR PLAYGROUND.

From snow and water to on- and off-road fun, BRP's passion for adventure fuels the innovations that deliver the ultimate experience in powersports. Because your free time should always be your best time.

SKI-DOO®

LYNX™

SEA-DOO®

EVINRUDE®

JOHNSON®

ROTAX®

CAN-AM™